

# The HULK

Model HA2

## “Residential Hinge Doctor”

by GKL Products • 510-791-0424

### INSTRUCTIONS FOR ADJUSTING THE TOP HINGE

**NOTE!!! Do not open the door  
while adjusting the hinge**

**Step 1:** Determine which end of the  
“Residential Hinge Doctor” (A or B) (see ILL-1)  
fits tightest over the hinge knuckles,  
applying that end to the upper most hinge knuckle  
attached to the door itself.

**Make sure the arrow faces the lockset. (see ILL-2)**





**Step 2:** With the arrow facing the lockset tighten  
the Allen head bolt so the tool just fits snug on the  
hinge knuckle (it does not have to be tight)

**Step 3:** Rotate the Hinge Doctor toward the  
door lock applying sufficient pressure to  
bend the Hinge Knuckle.

**Step 4:** Repeat steps 2 & 3 on the other  
hinge knuckles that are attached to the door.

**Note:** Sufficient pressure should be able to be  
applied by hand. However if more leverage is needed  
a pipe or crescent wrench can be used as a lever  
by adding it to the opposite end of the Hinge Doctor  
and pushing toward the door knob (lockset).

**Caution excessive force with an extension  
will damage the Hinge Doctor.**

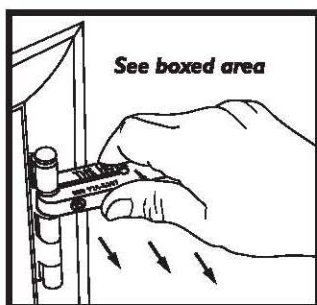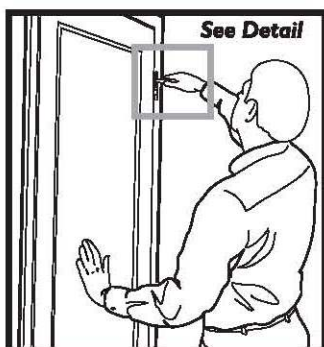

**Adjusting the bottom hinge  
is NOT recommended!**